

SORA Casino Chip Case for 10 Chips

1

MPIN7
Long Magnetic Pins

8711802401b
Back Panel

Place the long magnetic pins on a flat surface with their shafts pointing up. Align them like the holes in the black back panel.
Now put the back panel on top magnetic pins. The pins will protrude the back panel by about 4 mm.

2

All acrylic parts of the frame are coated with a protective foil on BOTH sides. Remove this protective foil from the front-side of your back-panel. Also remove both foils from the centre part.

3

8711802401c
Centre Part

Now place the centre part with the cut-outs on top of your back-panel and insert your casino chips.

4

8711802401f
Front Panel

Now remove the protective foil from one side of the front panel. Place the front panel on the centre part as indicated with the foil-free side facing down.

5

MPIN4
Short Magnetic Pins

Now there are only two things left to do:
Slot the 4 short magnetic pins through the holes in the front-panel. They will instantly snap to their longer counterparts.
Remove the remaining protective foil from the front- and back-panel ... and you are done!

Cleaning instructions :
Please do not use any cleaning agents other than water or special acrylic care products. Many other cleaning agents contain solvents, which can damage the acrylic glass.

Individual Parts :

MPIN7 - 4 x Long Magnetic Pin 7mm shaft length
MPIN4 - 4 x Short Magnetic Pin 4mm shaft length
Long and short magnetic pins have inverse magnetic polarity to snap together at the shafts.

8711802401f
Front Panel

8711802401c
Centre Part

8711802401b
Back Panel (black)

Sora-Shop.com
Am Schunkenhofe 11
D-99848 Wutha-Farnroda
info@sorashowcases.com

Business hours :
Mo - Th. 09:00 a.m. - 04:00 p.m.
Fr. 09:00 a.m. - 11:00 p.m.
+49 36921 914 11