


**1**




All acrylic parts are coated with a protective foil on BOTH sides. This foil has to be removed before the assembly. We suggest to have a microfiber cloth ready to clean the surface, if necessary.

**2**

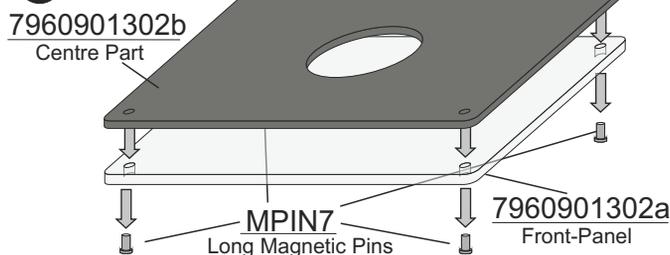


Place the long magnetic pins on a flat surface with their shafts pointing up. Align them like the holes in the transparent front-/back panel. Now put the front-panel on the magnetic pins. Place the centre part on top as indicated.

**3**

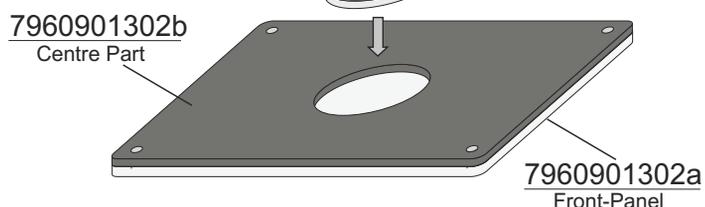

Now place the black centre part with the cut-outs on top of your transparent front-panel and centre panel. Place your coin inside the cut-out in the black centre part.


**4**

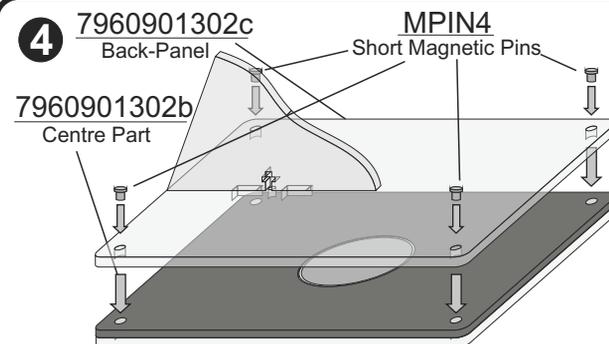

Place the back-panel with the attached frame-stand on top of the front-panel and centre part.

Finally use the short magnetic pins to establish a tight connection between all parts of the frame.

**5**

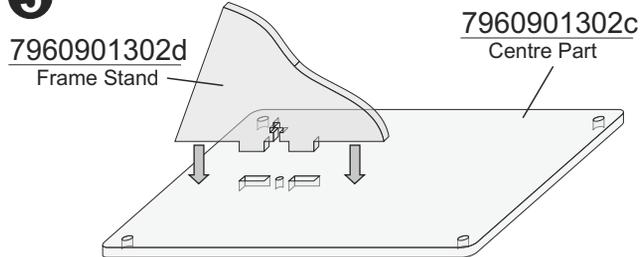

Slot the frame-stand into the back-panel of the frame, as indicated. Make sure that countersunk side of the back-panel is opposite to the frame-stand.

Now connect the frame-stand with the back-panel using the small M2.5 countersunk screws and hexagon nuts.

Please fasten the screw only lightly.

**Cleaning instructions :**

Please do not use any cleaning agents other than water or special acrylic care products. Many other cleaning agents contain solvents, which can damage the acrylic glass.



**Individual Parts :**

**7960901302d**  
Frame-Stand

**MPIN7** -4 x Long Magnetic Pin 7mm shaft length

**MPIN4** -4 x Short Magnetic Pin 4mm shaft length

**Long and short magnetic pins have inverse magnetic polarity to snap together at the shafts.**

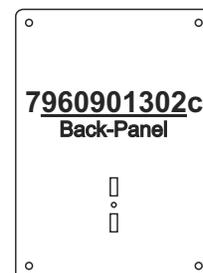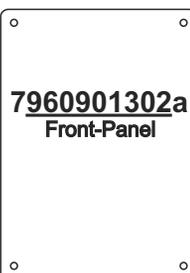

**Sora-Shop.com**  
Am Schunkehofe 11  
D-99848 Wutha-Farnroda  
info@sorashowcases.com

**Business hours :**  
Mo - Th. 09:00 a.m. - 04:00 p.m.  
Fr. 09:00 a.m. - 11:00 p.m.  
**+49 36921 914 11**