


Acrylic case made to measure

Begin assembly of the case by putting the front panel on a flat surface (i.e. table). Connect the side panels and the top cover to the front panel. Use the screws and nuts to bolt together the side panels and the cover of the acrylic case (compare the illustration below). Repeat this procedure for the back panel and the front panel. Important: Please tighten the screws only lightly.

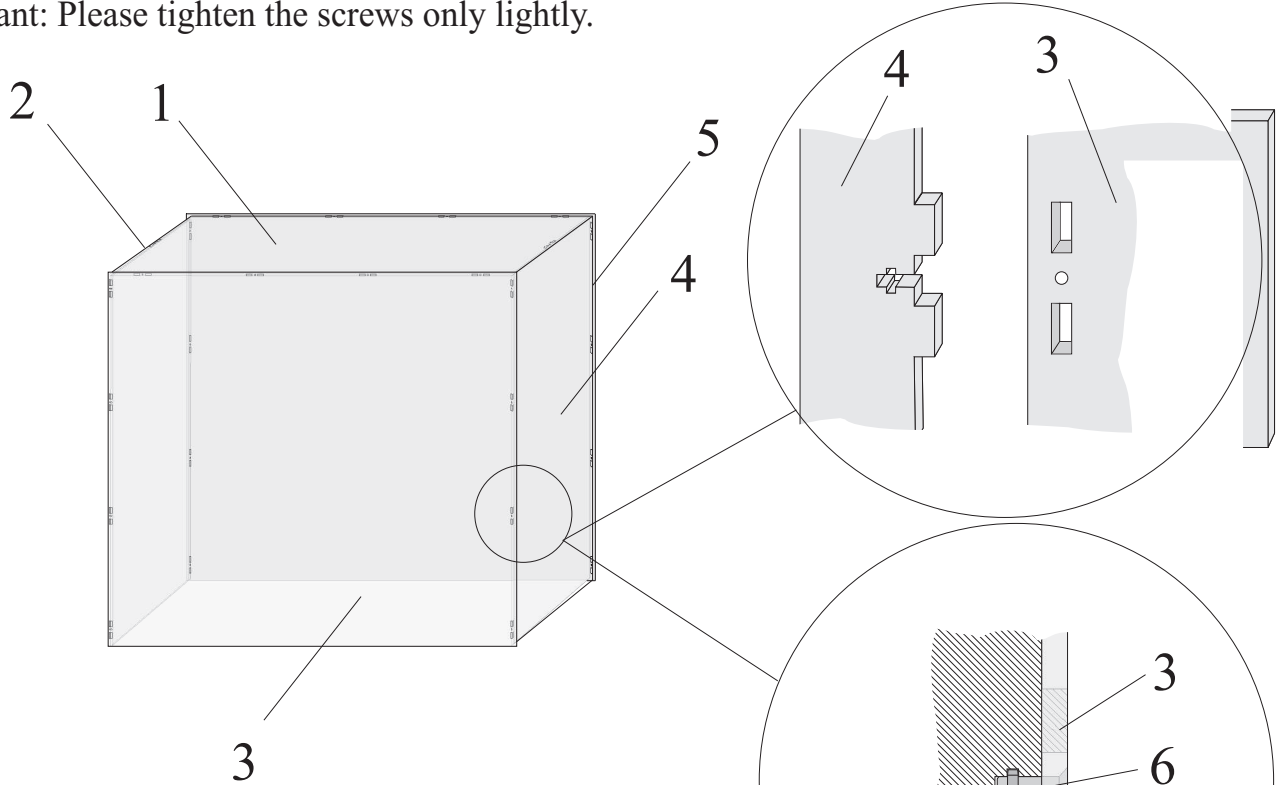

individual parts:

screws M4 * 6mm
sleeve nuts M4 * 7mm

to bolt together the two
base parts "e" & "f"

6) screws M2,5 * 10mm
7) nuts M2,5

