


# Modular display cabinet H0

Item.No.: 12600

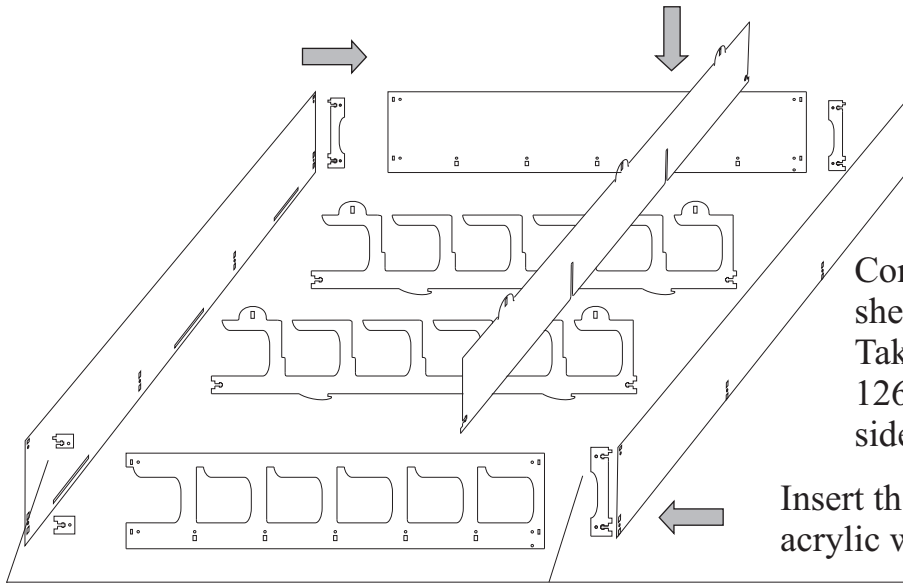



Please remove the protection film from the acrylic sheets before assembling. At first, please connect the five interior shelves to the side panels.

Continue by fastening the two exterior shelves to the side panels.

Take the connecting parts 1200k and 12600j and screw them on the exterior side panels.

Insert the back and front panel. Use the small acrylic wedges to clamp the back panel.

To connect several modular display cabinets horizontally, please replace the short M3 screws with the longer screws to establish a tight connection between the cabinets.

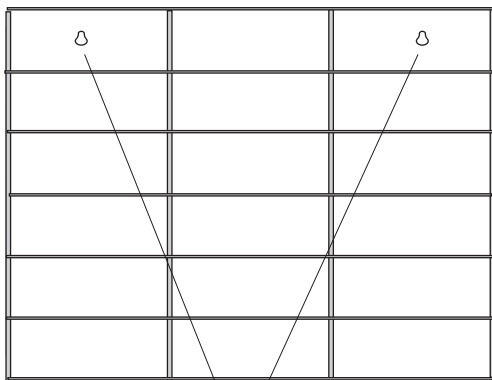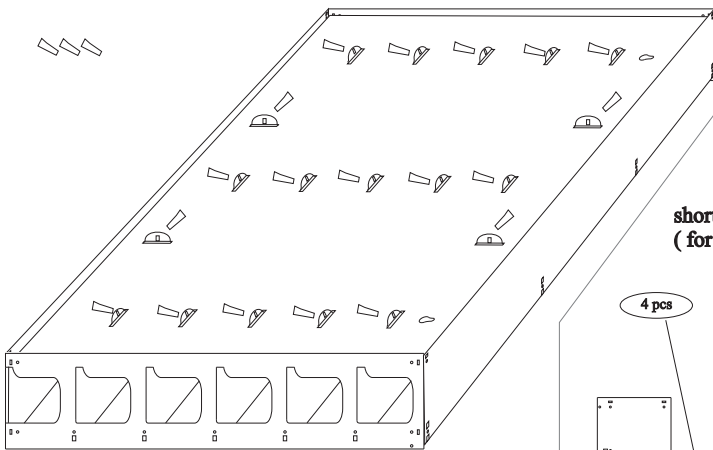

**suitable for wall mounting  
or mounting on the floor**

## individual parts :

**12600x** acrylic wedges 19 pcs

30 pcs screws and nuts M3

**12600g** interior side panel 2 pcs

2 pcs short screws and nuts M3 (for front panel)

**12600f** shelf 5 pcs

4 pcs **12600k** connecting parts

**12600e** lower shelf 1 pcs

**12600h** exterior side panel (closed)

**12600d** top shelf 1 pcs

2 pcs According to side configuration (both sides closed, one side open, both sides open)

**12600c** front panel 1 pcs

**12600i** exterior side panel (open)

These connecting parts are needed for the open exterior side panels only.

**12600j** connecting parts

**12600a** back panel 1 pcs